



Spinning Flagpole

FP111

The spinning flagpole can be used with flags up to 36" high.

To install a 36" high flag so that the top half of the flagpole remains free to spin with the slightest encouragement, be sure to place one of the sliding nylon collars at each extreme end of the upper pole.

Fasten a flag by feeding the nylon screws on the collars through the flag's top and bottom grommets. If desired, use the clip at the top of the pole to ensure the flag remains firmly fixed. (***Note:** When the topmost collar is correctly positioned, the clip will hang a bit loose, but its function will not be compromised.*)

www.leevalley.com

1090 Morrison Drive	814 Proctor Avenue
Ottawa, Ontario	Ogdensburg, New York
K2H 1C2 Canada	13669-2205 USA
1-800-267-8761	1-800-267-8735