

 **Caution:** Strong magnetic field. Keep magnets away from all electronic equipment (e.g., computers, television screens) or other items that have information stored magnetically (e.g., credit cards, bank cards, computer disks). Magnets can corrupt stored data if placed too near.

This Cree® LED work light requires three AA batteries. To install the batteries, unscrew the tail cap located at the base of the main case (see **Figure 1**), remove the battery cartridge and insert the batteries in the battery cartridge, following the polarity symbols embossed in the top and bottom of the battery cartridge. Reinsert the battery cartridge such that the two positive terminals (+) point inside the main case and reinstall the tail cap.

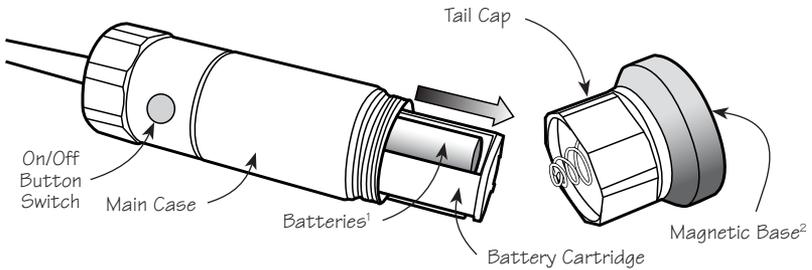


Figure 1: Installing the batteries.

To adjust the light beam, slide the lamp head casing up (for wide beam) or down (for narrow beam). See **Figure 2**.

 **Caution:** Avoid bending the gooseneck too sharply, as over time this will affect the gooseneck's ability to maintain its position.

Notes:

¹ Batteries can vary in diameter. The battery cartridge may not fit inside the main case when it is loaded with rechargeable batteries.

² The magnetic base is removable; simply unscrew it from the tail cap.

³ The side-mounting clip is intended for use **only** when the light is mounted vertically.

 **Tip:** To prolong battery life, remove the batteries when the light is not expected to be used for extended periods of time

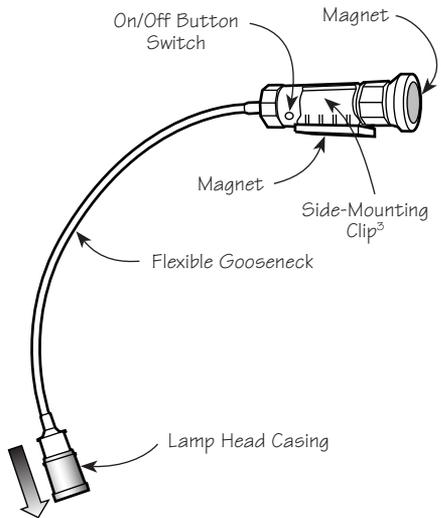


Figure 2: LED work light components.