Center-Mount Drawer Slides 02K40.12 to 02K40.24

Length: 12", 14", 16", 17", 18", 19", 20", 22", or 24"

Travel: see chart
Thickness: 3/8"

Clearance: 1/16" on either side of the drawer, 3/8" between cabinet and

drawer bottom

Load Capacity: 11.34 kg (25 lb) for the 18" slide

Screws: Included

Center-Mount Drawer Slides						
	Slide Length		Slide Travel		Fit Drawer Length	
	inches	mm	inches	mm	inches	mm
02K40.12	11.9	301	8.5	216	11.9	302
02K40.14	13.9	353	10.5	267	13.9	353
02K40.16	15.9	403	12.0	305	15.9	403
02K40.17	16.9	429	12.1	307	16.9	429
02K40.18	17.9	454	12.5	318	17.9	454
02K40.19	18.9	479	13.9	353	18.9	479
02K40.20	19.9	505	14.5	368	19.9	505
02K40.22	21.9	556	16.5	419	21.9	556
02K40.24	23.9	607	17.5	445	23.9	607

- 1. Extend the parts (stopping just before their locking point), and then pull sharply to separate the slide members.
- 2. Determine and mark where the center line of the slide will land on the drawer bottom and the face frame rail at the front of the cabinet.
- 3. Measure the distance between the cabinet side and the center line mark on the frame rail. Transfer this measurement and mark a vertical center line onto the back of the cabinet. Use a square to ensure the back of the slide is at 90° in relation to the front of the cabinet.


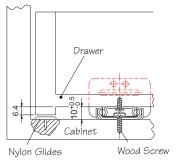



Figure 1

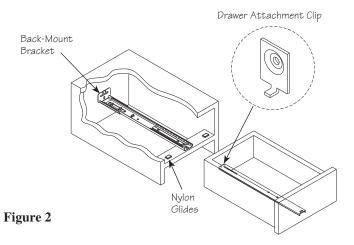

4. Install the back-mount bracket onto the back of the cabinet slide member.

Note: The bracket permits up to a 13/4" adjustment for cabinet depth.

 - 5. Position the front of the cabinet slide member about 1/8" in from the edge of the cabinet rail and secure with a wood screw.
- Use a level to ensure the back of the cabinet slide is in line with the front of the slide. Fasten the back-mount bracket onto the back of the cabinet with a screw.
- Cut a notch in the drawer back as required. Insert a screw at the front of the drawer slide member on the drawer bottom. Fasten the back of the slide with a screw.
- 8. If desired, secure the included drawer attachment clip to the back of the drawer, then insert the clip into one of the holes in the drawer slide member. The clip allows the drawer to disconnect from the slide by unscrewing the single front fastener.
- 9. Tap the included nylon glides on top of the cabinet rail, one at each side (as shown in **Figure 2**).
- 10. Slide the drawer into the cabinet to reconnect the slide members.

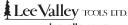

www.leevalley.com

1090 Morrison Drive Ottawa ON K2H 1C2 Canada

1-800-267-8761

814 Proctor Avenue Ogdensburg NY 13669-2205 United States

1-800-267-8735